

VOLUME ONE:

TABLE OF CONTENTS



Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
Supplemental Manuals	1-2
Technical Support	1-2
Conventions Used	1-3
Key Topics for Each Chapter	1-3
DL06 Micro PLC Overview	1-4
The DL06 PLC Features	1-4
Programming Methods	1-4
DirectSOFT32 Programming for Windows™	1-4
Handheld Programmer	1-5
I/O Quick Selection Guide	1-5
Quick Start	1-6
Steps to Designing a Successful System	1-10
Questions and Answers about DL06 Micro PLCs	1-12

Chapter 2: Installation, Wiring, and Specifications

Safety Guidelines	2-2
Plan for Safety	2-2
Three Levels of Protection	2-2
Orderly System Shutdown	2-3
System Power Disconnect	2-3
Emergency Stop	2-3
Class 1, Division 2 Approval	2-4
Orientation to DL06 Front Panel	2-4

Table of Contents

Terminal Block Removal	2-5
Mounting Guidelines	2-6
Unit Dimensions	2-6
Enclosures	2-6
Panel Layout & Clearances	2-7
Using Mounting Rails	2-8
Environmental Specifications	2-9
Agency Approvals	2-9
Wiring Guidelines	2-10
Fuse Protection for Input Power	2-10
External Power Source	2-11
Planning the Wiring Routes	2-11
Fuse Protection for Input and Output Circuits	2-12
I/O Point Numbering	2-12
System Wiring Strategies	2-13
PLC Isolation Boundaries	2-13
Connecting Operator Interface Devices	2-14
Connecting Programming Devices	2-14
Sinking / Sourcing Concepts	2-15
I/O “Common” Terminal Concepts	2-16
Connecting DC I/O to “Solid State” Field Devices	2-17
Solid State Input Sensors	2-17
Solid State Output Loads	2-17
Relay Output Wiring Methods	2-19
Surge Suppression For Inductive Loads	2-20
Prolonging Relay Contact Life	2-21
DC Input Wiring Methods	2-22
DC Output Wiring Methods	2-23
High-Speed I/O Wiring Methods	2-24
Glossary of Specification Terms	2-25
Wiring Diagrams and Specifications	2-26
D0-06AR I/O Wiring Diagram	2-28
D0-06DA I/O Wiring Diagram	2-30
D0-06DD1 I/O Wiring Diagram	2-32
D0-06DD2 I/O Wiring Diagram	2-34
D0-06DR I/O Wiring Diagram	2-36
D0-06DD1-D I/O Wiring Diagram	2-38

D0–06DD2–D I/O Wiring Diagram	2–40
D0–06DR–D I/O Wiring Diagram	2–42
Discrete Option Modules	2–44
I/O Addressing	2–53
Module I/O Points and Addressing	2–53

Chapter 3: High-speed Input and Pulse Output Features

Introduction	3–2
Built-in Motion Control Solution	3–2
Availability of HSIO Features	3–2
Dedicated High- Speed I/O Circuit	3–3
Wiring Diagrams for Each HSIO Mode	3–3
Choosing the HSIO Operating Mode	3–4
Understanding the Six Modes	3–4
Default Mode	3–5
Configuring the HSIO Mode	3–6
Configuring Inputs X0 – X3	3–6
Mode 10: High-Speed Counter	3–7
Purpose	3–7
Functional Block Diagram	3–7
Wiring Diagram	3–8
Interfacing to Counter Inputs	3–8
Setup for Mode 10	3–9
Presets and Special Relays	3–9
Absolute and Incremental Presets	3–10
Preset Data Starting Location	3–11
Using Fewer than 24 Presets	3–11
Equal Relay Numbers	3–12
Calculating Your Preset Values	3–13
X Input Configuration	3–14
Writing Your Control Program	3–15
Program Example 1: Counter Without Presets	3–16
Program Example Cont'd	3–17
Program Example 2: Counter With Presets	3–18
Program Example 3: Counter With Preload	3–21
Troubleshooting Guide for Mode 10	3–23

Symptom: The counter does not count.	3-23
Symptom: The counter counts but the presets do not function.	3-23
Symptom: The counter counts up but will not reset.	3-23
Mode 20: Up/Down Counter	3-24
Purpose	3-24
Functional Block Diagram	3-24
Quadrature Encoder Signals	3-25
Wiring Diagram	3-25
Setup for Mode 20	3-27
Presets and Special Relays	3-27
X Input Configuration	3-28
Mode 20 Up/Down Counter	3-28
Writing Your Control Program	3-29
Program Example 1: Quadrature Counting with an Interrupt	3-30
Program Example 2: Up/Down Counting with Standard Inputs	3-32
Program Example 3: Quadrature Counting	3-34
Troubleshooting Guide for Mode 20	3-37
Symptom: The counter does not count.	3-37
Symptom: The counter counts in the wrong direction	3-37
Symptom: The counter counts up and down but will not reset.	3-37
Mode 30: Pulse Output	3-38
Purpose	3-38
Functional Block Diagram	3-39
Wiring Diagram	3-40
Interfacing to Drive Inputs	3-40
Motion Profile Specifications	3-41
Physical I/O Configuration	3-41
Logical I/O Functions	3-41
Profile / Velocity Select Register	3-43
Profile Parameter Table	3-43
Automatic Trapezoidal Profile	3-43
Step Trapezoidal Profile	3-44
Choosing the Profile Type	3-45
Automatic Trapezoidal Profile Defined	3-45
Step Trapezoidal Profiles Defined	3-46
Velocity Control Defined	3-46
Automatic Trapezoidal Profile Operation	3-47

Program Example 1: Automatic Trapezoidal Profile without External Interrupt . . .	3-48
Preload Position Value	3-49
Program Example 2: Automatic Trapezoidal Profile with External Interrupt	3-50
Program Example 3: Automatic Trapezoidal Profile with Home Search	3-53
Step Trapezoidal Profile Operation	3-55
Program Example 4: Step Trapezoidal Profile	3-56
Velocity Profile Operation	3-59
Program Example 5: Velocity Profile	3-60
Program Example Cont'd	3-61
Automatic Trapezoidal Profile Error Codes	3-62
Troubleshooting Guide for Mode 30	3-62
Symptom: The stepper motor does not rotate.	3-62
Symptom: The motor turns in the wrong direction.	3-63
Mode 40: High-Speed Interrupts	3-64
Purpose	3-64
Functional Block Diagram	3-64
Setup for Mode 40	3-65
Interrupts and the Ladder Program	3-65
External Interrupt Timing Parameters	3-66
Timed Interrupt Parameters	3-66
X Input / Timed INT Configuration	3-66
Program Example 1: External Interrupt	3-67
Program Example 2: Timed Interrupt	3-68
Mode 50: Pulse Catch Input	3-69
Purpose	3-69
Functional Block Diagram	3-69
Pulse Catch Timing Parameters	3-69
Setup for Mode 50	3-70
X Input Configuration	3-71
Program Example 1: Pulse Catch	3-72
Mode 60: Discrete Inputs with Filter	3-73
Purpose	3-73
Functional Block Diagram	3-73
Input Filter Timing Parameters	3-73
Setup for Mode 60	3-74
X Input Configuration	3-74
Program Example: Filtered Inputs	3-75

Chapter 4: CPU Specifications and Operation

Introduction	4-2
DL06 CPU Features	4-2
CPU Specifications	4-3
CPU Hardware Setup	4-4
Communication Port Pinout Diagrams	4-4
Connecting the Programming Devices	4-5
CPU Setup Information	4-5
Status Indicators	4-6
Mode Switch Functions	4-6
Changing Modes in the DL06 PLC	4-7
Mode of Operation at Power-up	4-7
Using Battery Backup	4-8
Battery Backup	4-8
Auxiliary Functions	4-9
Clearing an Existing Program	4-9
Initializing System Memory	4-9
Setting Retentive Memory Ranges	4-10
Using a Password	4-11
CPU Operation	4-12
CPU Operating System	4-12
Program Mode	4-13
Run Mode	4-13
Read Inputs	4-14
Service Peripherals and Force I/O	4-14
CPU Bus Communication	4-15
Update Clock, Special Relays and Special Registers	4-15
Solve Application Program	4-16
Solve PID Loop Equations	4-16
Write Outputs	4-17
Write Outputs to Specialty I/O	4-17
Diagnostics	4-17
I/O Response Time	4-17
Is Timing Important for Your Application?	4-17
Normal Minimum I/O Response	4-18
Normal Maximum I/O Response	4-18

Improving Response Time	4-19
CPU Scan Time Considerations	4-20
Reading Inputs	4-20
Writing Outputs	4-20
Service Peripherals	4-21
CPU Bus Communication	4-21
Update Clock / Calendar, Special Relays, Special Registers	4-21
Application Program Execution	4-22
PLC Numbering Systems	4-23
PLC Resources	4-23
V-Memory	4-24
Binary-Coded Decimal Numbers	4-24
Hexadecimal Numbers	4-24
Memory Map	4-25
Octal Numbering System	4-25
Discrete and Word Locations	4-25
V Memory Locations for Discrete Memory Areas	4-25
Input Points (X Data Type)	4-26
Output Points (Y Data Type)	4-26
Control Relays (C Data Type)	4-26
Timers and Timer Status Bits (T Data Type)	4-26
Timer Current Values (V Data Type)	4-27
Counters and Counter Status Bits (CT Data type)	4-27
Counter Current Values (V Data Type)	4-27
Word Memory (V Data Type)	4-28
Stages (S Data type)	4-28
Special Relays (SP Data Type)	4-28
DL06 System V-memory	4-29
System Parameters and Default Data Locations (V Data Type)	4-29
DL06 Memory Map	4-31
1-The DL06 systems are limited to 20 discrete inputs and 16 discrete outputs with the present available hardware, but 512 point addresses exist.	4-31
X Input / Y Output Bit Map	4-32
Stage Control / Status Bit Map	4-33
Control Relay Bit Map	4-35
Timer Status Bit Map	4-37

Counter Status Bit Map	4-37
Remote I/O Bit Map	4-38
Module Placement	4-42
Slot Numbering	4-42
Automatic I/O Configuration	4-43
Manual I/O Configuration	4-43
Power Budgeting	4-44
Power supplied	4-44
Power required by base unit	4-44
Power required by option cards	4-44
DL06 Port Specifications	4-46
Configuring the DL06's Comm Ports	4-46
DL06 Port Pinouts	4-46
Choosing a Network Specification	4-47
RS-232 Network	4-47
RS-422 Network	4-47
RS-485 Network	4-47
Connecting to MODBUS and DirectNET Networks	4-48
MODBUS Port Configuration	4-48
DirectNET Port Configuration	4-49
Non-Sequence Protocol (ASCII In/Out and PRINT)	4-50
MODBUS Port Configuration	4-50
Network Slave Operation	4-51
MODBUS Function Codes Supported	4-51
Determining the MODBUS Address	4-51
If Your Host Software Requires the Data Type and Address...	4-52
Example 1: V2100	4-53
Example 2: Y20	4-53
Example 3: T10 Current Value	4-53
Example 4: C54	4-53
If Your MODBUS Host Software Requires an Address ONLY	4-54
Example 1: V2100 584/984 Mode	4-56
Example 2: Y20 584/984 Mode	4-56
Example 3: T10 Current Value 484 Mode	4-56
Example 4: C54 584/984 Mode	4-56

Network Master Operation	4-57
Step 1: Identify Master Port # and Slave #	4-58
Step 2: Load Number of Bytes to Transfer	4-58
Step 3: Specify Master Memory Area	4-59
Step 4: Specify Slave Memory Area	4-59
Communications from a Ladder Program	4-60
Multiple Read and Write Interlocks	4-60
Network Master Operation (using MRX and MWX Instructions)	4-61
MODBUS Function Codes Supported	4-61
MODBUS Port Configuration	4-62
MODBUS Read from Network(MRX)	4-63
MRX Slave Memory Address	4-64
MRX Master Memory Addresses	4-64
MRX Number of Elements	4-64
MRX Exception Response Buffer	4-64
MODBUS Write to Network (MWX)	4-65
MWX Slave Memory Address	4-66
MWX Master Memory Addresses	4-66
MWX Number of Elements	4-66
MWX Exception Response Buffer	4-66
MRX / MWX Example in DirectSOFT32	4-67
Multiple Read and Write Interlocks	4-67

Chapter 5: Standard RLL Instructions

Introduction	5-2
Using Boolean Instructions	5-5
END Statement	5-5
Simple Rungs	5-5
Normally Closed Contact	5-5
Contacts in Series	5-6
Midline Outputs	5-6
Parallel Elements	5-6
Joining Series Branches in Parallel	5-7
Joining Parallel Branches in Series	5-7
Combination Networks	5-7
Comparative Boolean	5-7

Boolean Stack	5-8
Immediate Boolean	5-9
Boolean Instructions	5-10
Comparative Boolean	5-26
Immediate Instructions	5-32
Timer, Counter and Shift Register Instructions	5-39
Using Timers	5-39
Timer Example Using Discrete Status Bits	5-41
Timer Example Using Comparative Contacts	5-41
Accumulating Timer Example using Discrete Status Bits	5-43
Accumulator Timer Example Using Comparative Contacts	5-43
Using Counters	5-44
Counter Example Using Discrete Status Bits	5-46
Counter Example Using Comparative Contacts	5-46
Stage Counter Example Using Discrete Status Bits	5-48
Stage Counter Example Using Comparative Contacts	5-48
Up / Down Counter Example Using Discrete Status Bits	5-50
Up / Down Counter Example Using Comparative Contacts	5-50
Accumulator / Stack Load and Output Data Instructions	5-52
Using the Accumulator	5-52
Copying Data to the Accumulator	5-52
Changing the Accumulator Data	5-53
Using the Accumulator Stack	5-54
Using Pointers	5-55
Pop Instruction Continued	5-66
Logical Instructions (Accumulator)	5-69
Math Instructions	5-86
Transcendental Functions	5-118
Bit Operation Instructions	5-120
Number Conversion Instructions (Accumulator)	5-127
Shuffle Digits Block Diagram	5-139
Table Instructions	5-141
Copy Data From a Data Label Area to V Memory	5-143
Clock / Calendar Instructions	5-171

CPU Control Instructions	.5-173
Program Control Instructions	.5-175
MLS/MLR Example	.5-182
Interrupt Instructions	.5-183
Timed Interrupt Program Example	.5-185
Message Instructions	.5-186
Fault Example	.5-186
Data Label Example	.5-188
Direct Text Entry	.5-197
Embedding V-memory data	.5-198
Embedding date and/or time variables	.5-198
Data Format Suffixes for Embedded V-memory Data	.5-199
Text Entry from V-memory	.5-200
MODBUS RTU Instructions	.5-201
MRX Slave Address Ranges	.5-202
MRX Example	.5-203
MWX Master Memory Address Ranges	.5-205
MWX Exception Response Buffer	.5-205
MWX Number of Elements	.5-205
MWX Slave Address Ranges	.5-205
MWX Example	.5-206
ASCII Instructions	.5-207
Reading ASCII Input Strings	.5-207
Writing ASCII Output Strings	.5-207
Managing the ASCII Strings	.5-208
AFIND Search Example	.5-214
AFIND Example Combined with AEX Instruction	.5-215