

Table of Contents

Introduction

Overview	2
The Purpose of this Manual	2
Supplemental Manuals	2
Who Should Read this Manual	2
Technical Support	2
Conventions Used	3
Key Topics for Each Chapter	3
D2–DCM Hardware	4
Applications	5
As a DirectNET Interface	5
As an Extra Communication Port	6
As a MODBUS) Network Interface	6
Specifications	7
Environmental Specifications	7
Operating Specifications	7
Using your D2–DCM– Five Steps	8

Building the Cable

Building the Communication Cable	9
Consideration 1: Physical Configuration	10
Consideration 2: Electrical Specification RS232C or RS422	11
Consideration 3: Cable Schematics	11
Consideration 4: Cable Specifications	12
Consideration 5: Installation Guidelines	12
A Quick Test Cable	15

Setting the Switches

Setting the D2–DCM switches	16
Host Computer or Operator Interface Connection	16
DirectNET Interface Connection	16
D2–DCM Switch Settings	17
Address Selection Switch	19
Online / Offline Switch	20

Install the D2–DCM

Install the D2–DCM and Starting the Network	21
Install the D2–DCM	21
Connect the Cables	21
If you're using DirectNET...	21
If you're using an Operator Interface or Host Computer...	22
If you're using MODBUS)...	22

Verification & Troubleshooting

Verification and Troubleshooting	23
Troubleshooting Quick Steps	24
Troubleshooting Chart	25

Appendix A: Cable Diagrams

Point-to-Point RS232C D2–DCM as Master	A-2
Point-to-Point RS232C PC as Master	A-3
Point-to-Point RS422 D2–DCM as Master	A-4
Point-to-Point RS422 PC as Master	A-6
Multidrop RS422 D2–DCM as Master	A-7
Multidrop RS422 PC as Master	A-9
DV-1000 Cable	A-10

Appendix B: RLL Communications Programs

Why do you need networking instructions in your RLL?	B-2
The Master Initiates Requests	B-2
Why Ladder Logic?	B-2
Identifying the master and slave locations & addresses	B-4
Specifying the amount of data to transfer	B-5
Designating the master station memory area	B-6
Identifying the slave station memory area to read or write	B-7
Controlling the communications	B-9
Communications Special Relays	B-9
Multiple Read and Write Interlocks	B-10

Appendix C: Using the D2–DCM with MODBUS

Introduction	C-2
How Does the D2–DCM work with MODBUS?	C-2
MODBUS Function Codes Supported	C-3
MODBUS Data Types Supported	C-3
Determining the MODBUS Address	C-4
If the Host Software Requires the Data Type and Address... ..	C-4
Example 1: V2100	C-6
Example 2: Y20	C-6
Example 3: T10 Current Value	C-6
Example 4: C54	C-6
If the Host Software Requires an Address ONLY	C-7
Example 1: V2100 584/984 Mode	C-9
Example 2: Y20 584/984 Mode	C-9
Example 3: T10 Current Value 484 Mode	C-9
Example 4: C54 584/984 Mode	C-9

Appendix D: Using the D2–DCM with Modems

Introduction	D-2
System Components	D-2
Possible Configurations	D-3
Choosing a Modem	D-3
Set the D2–DCM Switches	D-4
Baud Rate & Parity	D-4
Delay Time	D-4
Delay Time Considerations for Networks with DL240 Slaves	D-5
Choose the Proper Cables	D-6
Connecting a Modem to your Personal Computer	D-6
Connecting a Modem to the D2–DCM	D-7
Connecting a Modem to the DL240	D-7

Using the MDM–TEL	D–8
RS232 Connections	D–8
The MDM–TEL Setup Wizard	D–8
D2–DCM as Master	D–9
If You are Using a D2–DCM as Master	D–9
Using DirectSOFT32	D–10
Creating a Modem Link	D–10
Modem Setup	D–10
Configuring the Link	D–14
